

WB-400 Factory Reset.

Turn machine ON. **There should be no tire/rim on shaft.**
Press the following sequence of buttons to do a Factory Code Reset.

1. Press Home button



2. Press DIS + button



Your screen will now display "SET UP"



3. Press Home 2 Times




Your screen will now display "POS" and "some number"



4. Rotate shaft until "111" appears in the right window.




5. Hit "C" button.

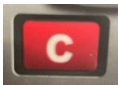

6. Rotate shaft until "55" appears in the right window.




7. Hit "C" button.

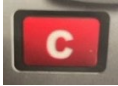

8. Rotate shaft until "111" appears in the right window.



9. Hit "C" button.

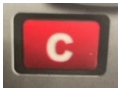

Your screen will now display "COD" and "Set"



10. Press Home key



Your screen will display "some number" on both sides



11. Press DIS + repeatedly until “46” appears in the left window. Press home key.



Your screen will now display “B-A” and “some number”



12. Pull Distance Gauge out and put to Flange – note distance on distance gauge. **The number on the right must match the number noted on the distance gauge.**



13. Change the number on the right by pressing DIS + or DIS -. **The number on the right must match the number noted on the distance gauge.**



14. Then press Home key.



Your screen will now display “EL1” “005”



15. Use DIS + or DIS – to change the number on the right to show 005 (in the unit of Gram) or 007 (in the unit of Ounce)



16. Press Home key.



Your Screen will now display “Tur” “OFF”



17. Press home key again



You will now hear a series of Beeps

18. Turn the machine off and back on.

YOU HAVE COMPLETED FACTORY RESET
